

# LA GARD 700 Basic

## User Operating Instructions



### Open the lock

Depending on the construction of the safe or vault, other locks such as key locks may need to be opened first. Factory code is 1 - 2 - 3 - 4 - 5 - 6

- Enter a valid 6-digit code *A double beep will sound if accepted*
- Within 4 seconds, turn the keypad and/or turn the safe handle

Any actions required to open the door and lock should be reversed to close and secure the door and lock.

### Turn on backlight

A button backlight can be turned on to provide a guide in dark areas.

- Press  or 

### Change code

Opening codes should be changed and tested with the safe or vault door open and locked where possible.

#### Method 1

- Enter 0-0-0-0-0-0 *A double beep will sound, and the LED will stay on*
- Enter the current code *A double beep will sound*
- Enter the new code *A double beep will sound*
- Enter the new code again to confirm *A double beep will sound, and the LED will turn off*

#### Method 2

- Enter the current code and hold down the last digit for 3 seconds *A second set of double beeps will sound and the LED will stay on*
- Press 0 *A double beep will sound*
- Enter the new code *A double beep will sound*
- Enter the new code again to confirm *A double beep will sound, and the LED will turn off*

**Test the new code whilst the door is open.**

## Troubleshooting

### 5 beeps sound during opening (Low battery warning)

Change both batteries with only high quality 9v alkaline batteries.

### 5 beeps sound on a key press (No lock found)

The keypad is unable to detect the lock. There may be damage to the cable, contact a safe engineer.

### 10 beeps sound on a key press (Critical low battery warning)

There is insufficient power to open the lock. Change both batteries with only high quality 9v alkaline batteries.

### LED flash every 10 seconds (Penalty)

The lock is in penalty caused by 4 consecutive incorrect code entries. Wait for the 5-minutes penalty period to elapse. After the penalty has elapsed, 2 further wrong codes will again initiate a penalty. The trigger will reset after a valid code has been entered.

### The key does not beep when pressed (Depleted batteries or Penalty)

The batteries may be completely depleted. Change both batteries with only high quality 9v alkaline batteries. If the LED flashes every 10 seconds the lock is in penalty.

### 3 beeps sounds during code or command entry

The code or command has not been entered correctly, re-enter.

### If a mistake is made during code or command entry

Wait 30 seconds and repeat the code or command

### The safe or vault door does not open


If the lock system is otherwise operating normally, there may be a mechanical fault with the safe. Contact a safe engineer.

## Change the batteries

- To eject the battery tray, depress the button at the location shown on the edge of the keypad



- Remove the battery tray

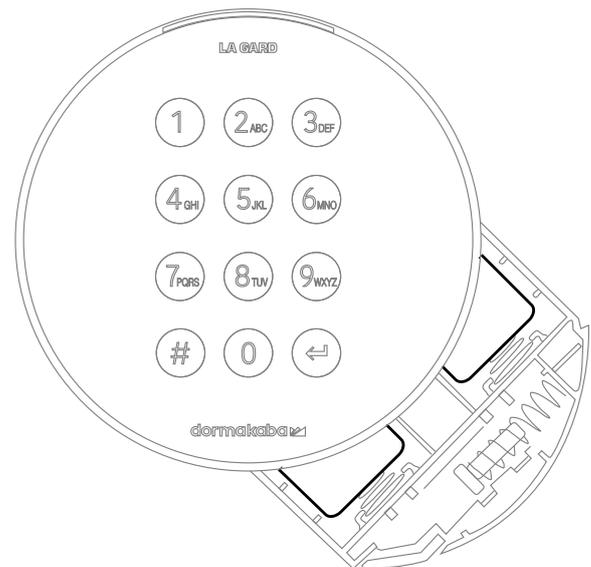

- Replace both batteries with high quality alkaline 9v batteries ensuring the terminals match to the indications embossed into the battery tray
- Re-insert the battery tray