

Securam Basic User Instructions



FEATURES

USER COMBINATION

- Open Lock
- Change Combination

WRONG TRY PENALTY

- Four (4) consecutive invalid combination initiates five (5) minute delay period.

LOW BATTERY WARNING

- Repeated LED flashing and beeping during opening indicates battery is low and needs immediate replacement.

AUDIO AND VISUAL SIGNAL

- Double signal - two (2) LED flashes and two (2) beeps - indicates entry is valid or accepted.
- Triple signal - three (3) LED flashes and three (3) beeps - indicates invalid or not accepted.

OPENING THE LOCK

1. Enter valid six (6) digit combination (factory set to 1-2-3-4-5-6).
2. The lock will confirm a valid combination entry with a double signal.
3. Within four (4) seconds, turn the handle to the open position.
4. Pull door open.

- **Invalid Combination Entry** - Lock will signal three (3) times.

WRONG TRY PENALTY

- Entry of four (4) consecutive invalid combinations starts a five (5) minute delay period.
 - LED flashes red at ten (10) second intervals.
- At the end of the delay period, two (2) more consecutive invalid combinations will restart the additional five (5) minute delay period.

Entry will not respond to keystrokes during delay period.

CHANGING YOUR COMBINATION

ALWAYS PERFORM THIS OPERATION WITH THE DOOR OPEN

1. Enter "zero" six times.
2. Enter your existing six (6) digit combination one time.
3. Enter your NEW six (6) digit combination two times.
4. If a mistake is made wait thirty (30) seconds and repeat steps 1 - 3.
5. Test lock operation several times before closing the door.

CAUTION: When selecting a combination do not use birthday or other predictable data

that could give correlation between the user and combination.

• **Valid Combination Entry** - Double signal after valid six (6) digit combination is entered.

• **Invalid Combination Entry** - Triple signal indicates the old combination is still valid.

BATTERY LOW WARNING

- Repeated LED flashing and beeping during an opening indicates that the battery is low and needs immediate replacement.
- Uses one (1) 9-Volt alkaline battery only. (Example: Duracell™ or Eveready™ alkaline batteries.) The replacement of batteries at least once annually is recommended.

If battery is depleted and will not allow lock to open, follow instructions below. Lock contains a non-volatile memory, even with batteries removed the lock will retain all programming.

CHANGING YOUR BATTERY

Note: Only use 9V Duracell Alkaline batteries.

Steps to change battery

1. Pull the TAB at the base of the keypad towards you to release the battery.
2. Remove battery and replace with a new 9 volt Duracell Alkaline battery.
3. Reinsert the battery pod and ensure it is firmly in place.
4. **CAUTION:** Fitting of an incorrect battery type or battery with low life span (limited use by date) may result in intermittent operational problems.

