






3 Number Combination Lock Opening and Changing Instructions

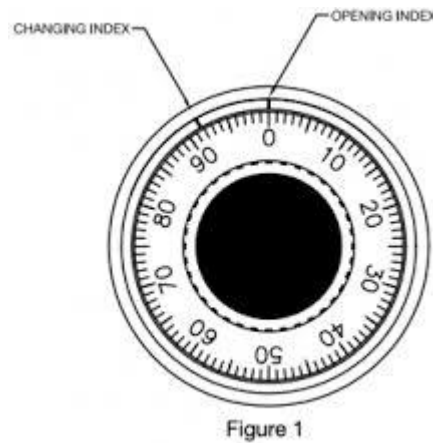

1 st Number	<input type="text"/>	 TURN LEFT	Stop when the number comes to the opening mark for the 4 th time
2 nd Number	<input type="text"/>	 TURN RIGHT	Stop when the number comes to the opening mark for the 3 rd time
3 rd Number	<input type="text"/>	 TURN LEFT	Stop when the number comes to the opening mark for the 2 nd time
		 TURN RIGHT	Slowly until the dial stops and the bolt retracts

(Factory Code 10 – 20 – 30)

- The lock should now be unlocked and you can operate the safe handle (if applicable) and pull the door open.
- To lock the safe turn the handle back to the original position and turn the dial left at least four complete turns.

Combination Changing Procedure


*Please read these instructions carefully before starting the process.

1. Locate the change key.






2. Dial the existing combination to the change mark (assuming 10 – 20 -30). Leave the 3rd number of the combination stopped on the mark.

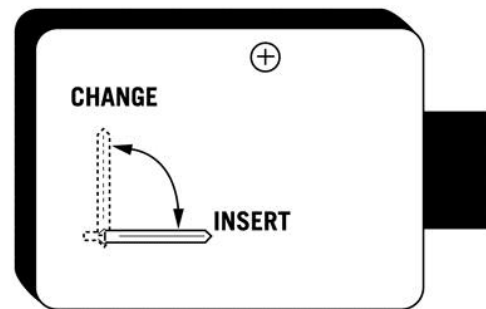3. Insert the change key into the back of the lock body and turn as shown. (anticlockwise)



4. Dial the new combination to the change mark using the correct sequence of turns and ensure to be accurate.

1 st Number	<input type="text"/>	 TURN LEFT	Stop when the number comes to the Change mark for the 4 th time
2 nd Number	<input type="text"/>	 TURN RIGHT	Stop when the number comes to the Change mark for the 3 rd time
3 rd Number	<input type="text"/>	 TURN LEFT	Stop when the number comes to the Change mark for the 2 nd time. Number must be above 20

5. Leave the 3rd number stopped on the change mark. Turn the change key back to the original position and remove it from the lock.

6. Test the combination by using the new numbers and the correct dialling sequence several times before locking the safe door.